ANTIK

SMART

SOS BUTTON

ATK-SBUT-W1-SOS


INSTRUCTION MANUAL

EN



Read this manual carefully before use,
and retain it for future reference.

Appearance Introduction

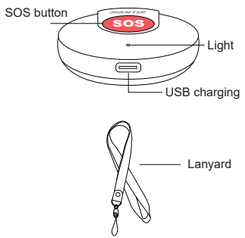


Register Account

Search the "Antik SmartHome" App in the IOS or Google Play store, or scan the following QR code to download.

Install the APP and register the account via email address.

ANTIK
SmartHome

Configuration network considerations

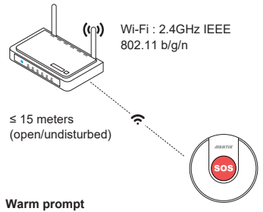


Warm prompt

The distances varies with the environment.

If the button is too far from the router, it will not be able to connect to the phone.

❶ Connect your phone to WiFi (2.4G) and turn on Bluetooth.

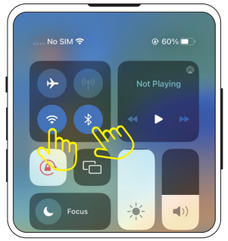

❷ Enter the configuration network state.




Press and hold the button for 5 seconds, and the LED indicator light Flashing rapidly.


Warm prompt

The duration of configuring network status in 2 minutes.


❸ Open the APP and click "Add Device".

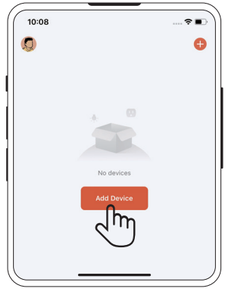


❹ After automatically discovering the device, click "Add".

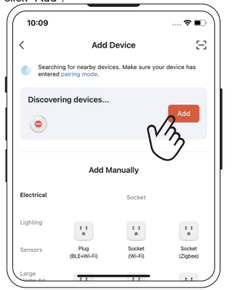


❺ Enter WiFi information and password.

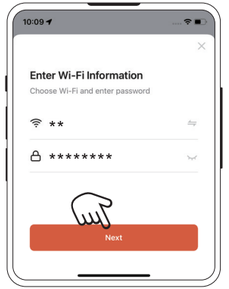

❻ Waiting for successful connection.

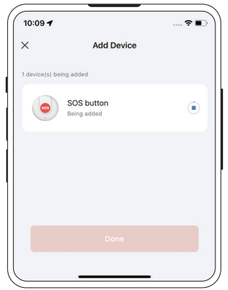

❼ Successfully connected, click "Done".

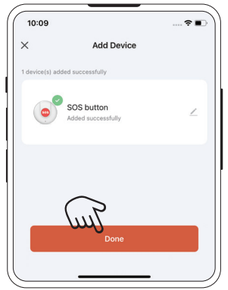


Alarm push notification




Multi-person sharing

❶ Click on the upper right corner

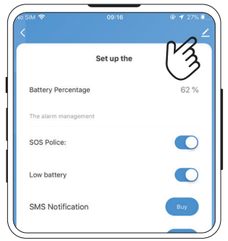


❷ Click "Share Device".

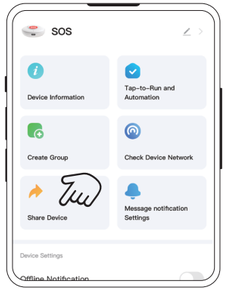

Installation

Installation method:




Double-sided tape can stick SOS button to the bathroom / toilet / kitchen, etc.




Lanyard design that can be hung around the neck.

Double sided adhesive installation



Tear off one side of the double-side adhesive tape.



Paste on the back of the button.

Q&A

Q: After configuring the network, trigger the button. The LED indicator light is constantly flashing.

A: (1) Because the button has exceeded the Wi-Fi range, the alarm is not successfully reported. Need to approach Wi-Fi and stop flashing after sucessful reporting.

(2) automatically stop after Waiting for 2 minutes.

Q: Unable to connect to mobile app?

A: The button is too far away from the router, please connect within 1~3 meters of the router.

Technical Specifications:

Standby current: ≤ 20 uA

Average current: ≤ 85 mA

Internal battery: Polymer battery 3.7 V/400 mAh

Charging duration: ≤ 1 hour

Charging cable type: USB-C

Wi-Fi: 2.4GHz IEEE 802.11 b/g/n

Working humidity: 0-99.9 % RH

Working temperature: -20 ℃~55 ℃

ANTIK Technology
Carskeho 10, 04001 Kosice, Slovakia (European Union)
www.antiksmarthome.sk

Manufactured in P. R. C.

RoHS

ANTIK

SMART
SOS BUTTON

ATK-SBUT-W1-SOS


NÁVOD NA POUŽITIE

SK



Pred použitím si tento návod pozorne prečítajte a uschovajte ho pre budúce použitie.

Úvod

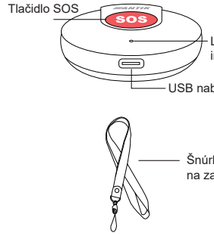


Registrácia účtu

Vyhľadajte aplikáciu „Antik SmartHome“ v App Store alebo Google Play, alebo naskenujte nasledujúci QR kód na stiahnutie.

Nainštalujte aplikáciu a zaregistrujte účet pomocou e-mailovej adresy.

ANTIK SmartHome

Konfigurácia siete

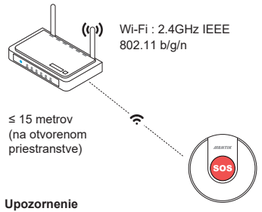


Upozornenie

Vzdialenosť sa môže líšiť podľa prostredia.

Ak je tlačidlo príliš ďaleko od routera, nebude sa vedieť pripojiť k telefónu.

❶ Pripojte svoj telefón k Wi-Fi (2,4 GHz) a zapnite Bluetooth.

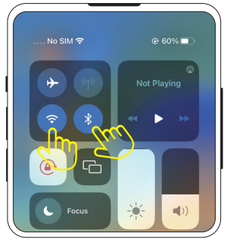

❷ Vstúpte do režimu konfigurácie siete.




Stlačte a podržte tlačidlo po dobu 5 sekúnd, kým LED indikátor nezačne rýchlo blikať.


Upozornenie

Trvanie konfigurácie siete je 2 minúty.


❸ Otvorte aplikáciu a kliknite na „Pridať zariadenie“.

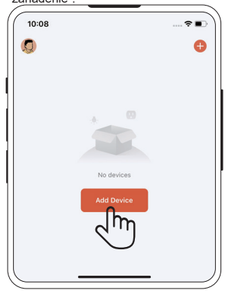


❹ Po automatickom nájdení zariadenia kliknite na „Pridať“.

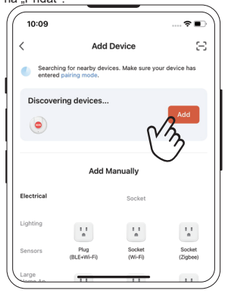


❺ Zadajte informácie o Wi-Fi a heslo.

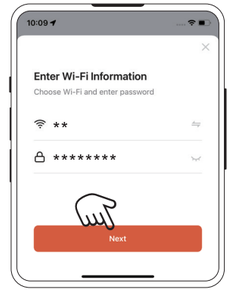

❻ Čakanie na úspešné pripojenie.

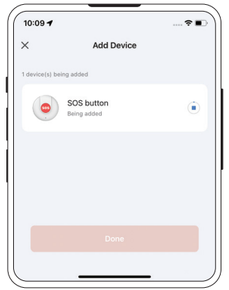

❼ Úspešne pripojené, kliknite na „Hotovo“.

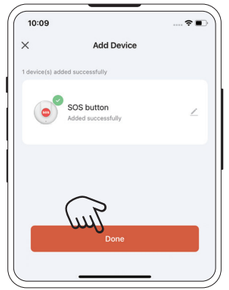


Push notifikácia alarmu




Zdieľanie viacerým osobám

❶ Kliknite na pravý horný roh.

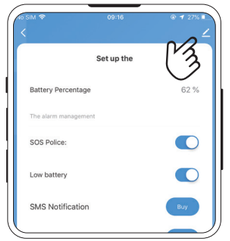


❷ Kliknite na „Zdieľať zariadenie“

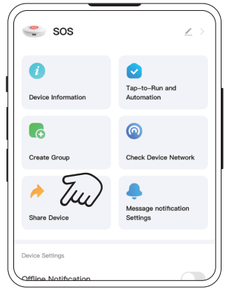

Inštalácia

Spôsob inštalácie:




Dvojstranná páska umožňuje pripevniť tlačidlo SOS na kúpeľňu, toaletu, kuchyňu a pod.




Dizajn so šnúrkou umožňuje zavesenie okolo krku.

Inštalácia pomocou obojstrannej lepiacej pásky



Odtrhnite jednu stranu obojstrannej lepiacej pásky.



Prilepte na zadnú stranu tlačidla.

Otázky a odpovede (Q&A)

Q: Po nakonfigurovaní siete spustite tlačidlo. LED indikátor neustále bliká.

A: (1) Tlačidlo je mimo dosah Wi-Fi, alarm nebol úspešne odoslaný. Priblížte sa k Wi-Fi; po úspešnom odoslaní blikanie prestane.

(2) Blikanie sa automaticky zastaví po 2 minútach čakania.

Q: Problém s pripojením k mobilnej aplikácii?

A: Tlačidlo je príliš ďaleko od routera, pripojte ho 1–3 metre od routera.

Technické špecifikácie:

Pohotovostný prúd: ≤ 20 μA

Priemerný prúd: ≤ 85 mA

Batéria: Polymérová batéria 3,7 V / 400 mAh

Doba nabíjania: ≤ 1 hodina

Typ nabíjacieho kábla: USB-C

Wi-Fi: 2,4 GHz IEEE 802.11 b/g/n

Prevádzková vlhkosť: 0–99,9 % RH

Prevádzková teplota: -20 °C až 55 °C

ANTIK Technology
Carskeho 10, 04001 Kosice, Slovakia (European Union)
www.antiksmarthome.sk

Manufactured in P. R. C.

RoHS